

Installation receiver EL.BEDIENING.07


Technical specifications	
Product	Radio receiver
Application	Electric radiators
Transmission	Radio Frequency, 868.3 MHz
Version	Class II
IP-code	IP44 (if mounted in supplied casing)
Warranty	2 years
Standard	RED 2014/53/EU - Article 3.1a (safety): EN62311; - Article 3.1b (EMC): ETSI EN301489-1 / ETSI EN301489-3 - Artikel 3.2 (RF): ETSI EN300220-2 ROHS 2011/65/EU: EN 50581 ISO 9001V2008
Approval mark	CE
Environmental directive	WEEE 2012/19/EU

Connections receiver:


- Connect the wiring of the radiator and the power supply as shown in the photos below. The extra 'bridge' (blue wire from L to 2) is necessary.



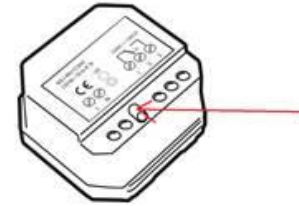

Connect receiver to thermostat:

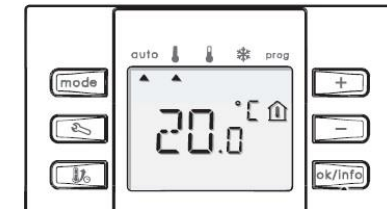

- Briefly press the button on the receiver with a pen/pencil and wait until the red light comes on.
- Then press the same button for approximately 5 seconds until the red light starts flashing.



- Take the thermostat and press for approximately 3 seconds on the  button until 'MEMO' appears in the display.
- Press 'OK/INFO' to confirm. The display will now show this symbol: 
- The light on the receiver will stop flashing and turn on continuously. After a while the light will go out and the connection is made.
- You can now set the thermostat as described in the manual.



Disposal: This product may NOT be treated as ordinary household waste. It has to be disposed of at proper waste collection sites.

WARNING: This manual is an addition to the instructions of Instamat Warmtetechniek BV. Please read the manual carefully before use and keep this for future reference.