


Instamat

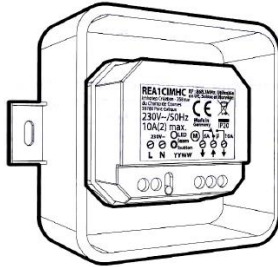


Installation receiver EL.BEDIENING.07


Technical specifications	
Product	Radio receiver
Application	Electric radiators
Transmission	Radio Frequency, 868.3 MHz
Version	Class II
IP-code	IP44 (if mounted in supplied casing)
Warranty	2 years
Standard	RED 2014/53/EU - Article 3.1a (safety): EN62311; - Article 3.1b (EMC): ETSI EN301489-1 / ETSI EN301489-3 - Artikel 3.2 (RF): ETSI EN300220-2 ROHS 2011/65/EU: EN 50581 ISO 9001V2008
Approval mark	CE
Environmental directive	WEEE 2012/19/EU

Connections receiver:


- Connect the wiring of the radiator and the power supply as shown in the photos below. The extra 'bridge' (wire from L to 2) is necessary.

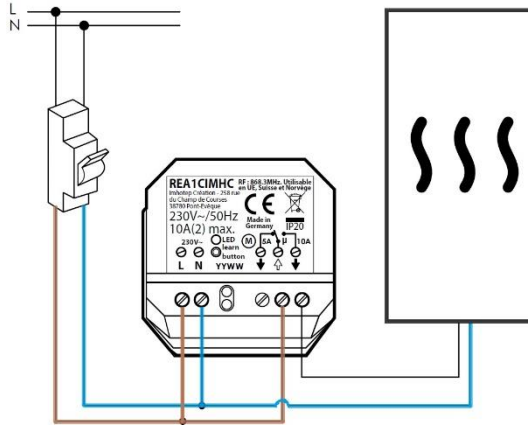

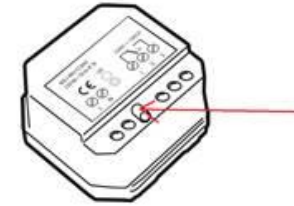

Connect receiver to thermostat:

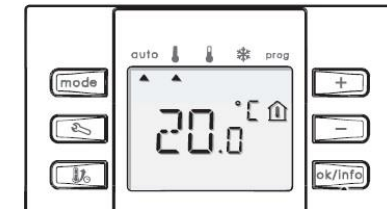

- Briefly press the button on the receiver with a pen/pencil and wait until the red light comes on.
- Then press the same button for approximately 5 seconds until the red light starts flashing.



- Take the thermostat and press for approximately 3 seconds on the  button until 'MEMO' appears in the display.
- Press 'OK/INFO' to confirm. The display will now show this symbol: 
- The light on the receiver will stop flashing and turn on continuously. After a while the light will go out and the connection is made.
- You can now set the thermostat as described in the manual.



Disposal: This product may NOT be treated as ordinary household waste. It has to be disposed of at proper waste collection sites.

WARNING: This manual is an addition to the instructions of Instamat Warmtetechniek BV. Please read the manual carefully before use and keep this for future reference.

INSTAMAT WARMTETECHNIEK BV
Spinfondsweg 15, 8171 NT Vaassen
Mail: info@instamat.nl – Website: instamat.nl