

Instamat

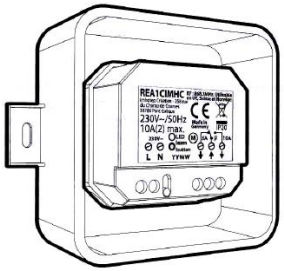

CE

Installation receiver EL.BEDIENING.07


Technical specifications	
Product	Radio receiver
Application	Electric radiators
Transmission	Radio Frequency, 868.3 MHz
Version	Class II
IP-code	IP44 (if mounted in supplied casing)
Warranty	2 years
Standard	RED 2014/53/EU Article 3.1a (safety): EN60669-1 / EN60669-2-1 / EN62311; Article 3.1b (EMC): ETSI EN301489-1 V1.9.2 / ETSI EN301489-3 – V1.6.1; Article 3.2 (RF): ETSI EN300220-1 V2.4.1 / ETSI EN300220-2 V2.4.1 ROHS: EN 50581 ISO 9001V2008
Approval mark	CE
Environmental directive	WEEE 2012/19/EU

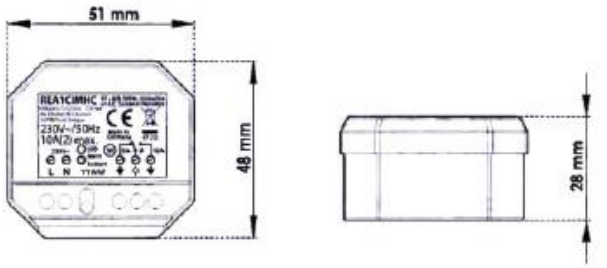


<u>WARNING:</u> This manual is an addition to the instructions of Instamat Warmtetechniek BV. Please read the manual carefully before use and keep this for future reference.

Connections receiver:


- Connect the wiring of the radiator and the power supply as shown in the photos below. The extra 'bridge' (wire from L to 2) is necessary.

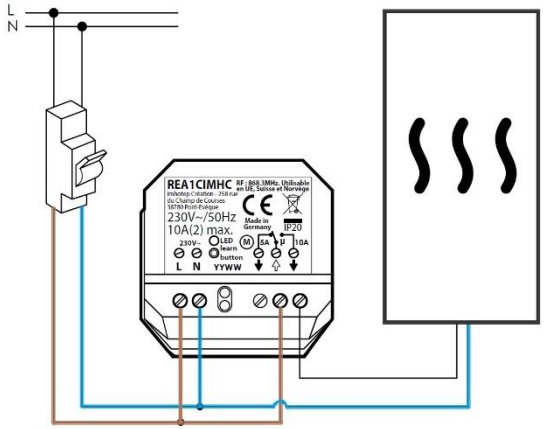

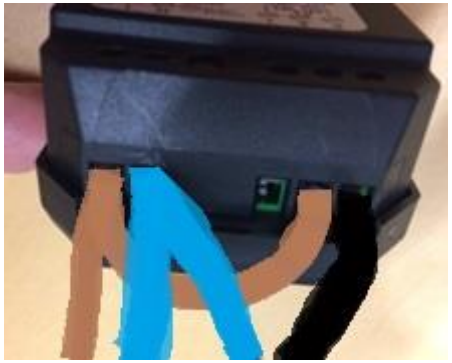


Connect receiver to thermostat:

- Briefly press the button on the receiver with a pen/pencil and wait until the red light comes on.

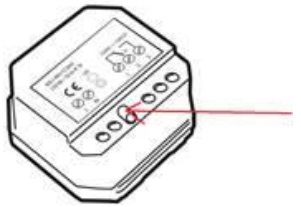

- Then press the same button for approximately 5 seconds until the red light starts flashing.

- Take the thermostat and press for approximately 3 seconds on the button until 'MEMO' appears in the display.

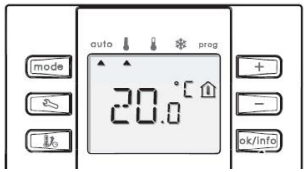

- Press 'OK/INFO' to confirm. The display will now show this symbol:

- The light on the receiver will stop flashing and turn on continuously. After a while the light will go out and the connection is made.

- **<u>Check this connection carefully before you neatly conceal the receiver and also immediately after you have concealed the receiver!</u>**

- You can now set the thermostat as described in the manual.

Disposal: This product may NOT be treated as ordinary household waste. It has to be disposed of at proper waste collection sites.

INSTAMAT WARMTETECHNIEK BV
Spinfondsweg 15, 8171 NT Vaassen
Mail: info@instamat.nl – Website: instamat.nl